

INSTALLATION INSTRUCTIONS

PD2090A PANIC DEVICE TOP LATCH RELEASE BOLT LOCK

READ THOROUGHLY BEFORE INSTALLING

CAUTION: This device for center hung doors only

INSTALLATION

- Review the installations shown in figures A through D. Center line of panic device determines location of release.
- The locking bolt will function as long as it enters the top latch bolt at some point. If it is not possible to line up on the panic device center line, a larger notch may have to be cut in the lock stile of the door to clear the lock latch bolt.
- 3. Remove bottom rod assembly.
- 4. A metal filler block must be placed in the top rail at the point of automatic relock switch. This block must be flush with the top of the door (required for the automatic relock switch). Because of variables, this filler block is not supplied by SDC. Notch inside top rail at relock switch.
- 5. After reinforcement tabs have been installed, attach power leads as shown in wire diagram.
- Insert lock into mortise and attach with machine screws provided.

SPECIFICATION

Faceplate: 10" x 1-1/2" x 1/8"

I.D. Requirements: 10" x 1-1/2" x 1-1/2"

Solenoid: 24 VAC and 24 VDC available

(Continuous Duty 2 Stage) Pull-in Coil – 57.6 watt / 2.4 amp at 24VDC

Holding Coil - 8.4 watt / .35 amp at 24VDC

Bolt: 1/2" diameter x 1/2" throw


B: Bolt position indicates bolt locked or unlocked


5 A. @ 30VDC

D: Door position indicates door open or closed

5 A. @ 30VDC

FAIL-SECURE (POWER TO UNLOCK)

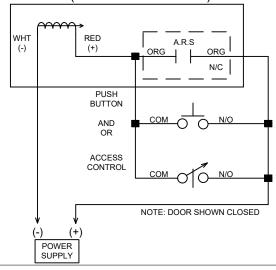

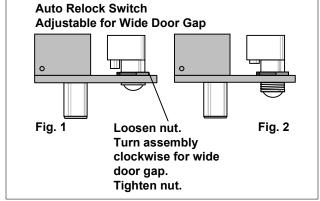

TROUBLESHOOTING

11100D220110011110		
	Problem	Solution
	Top latch will not stand up.	Adjust top latch.
	Bolt will not retract.	Check voltage at lock. Check rating of transformer. Check for cracks in switch on side of lock body.
	Bolt projects too soon.	Adjust auto relock switch
	Bolt projects when door is open.	ARS has been bypassed. Check wiring



TYPICAL INSTALLATION FOR PANIC LOCK

