
EMLock[®] Exit Check[®] SELECTRIC[®] Spacesaver[™] HiTower[®] Sure Exit[®] EntryCheck[™]

RISER DIAGRAM

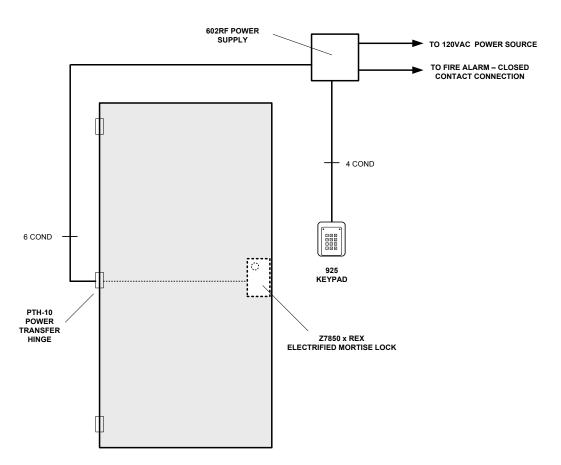

NOTES: (1) ALL LOW VOLTAGE SIGNAL WIRING SHALL BE 20-GAUGE MINIMUM. THE MINIMUM INDUCTIVE LOAD (LOCK) POWER WIRE GAUGE SHALL BE DETERMINED PER THE SDC WIRE GAUGE CHART. ALL WIRING (SINGLE OR MULTI-CONDUCTOR) SHALL BE COLOR CODED WITHOUT SPLICES. A MINIMUM OF TWO SPARE CONDUCTORS IS RECOMMENDED. (2) SPECIFY VOLTAGE WHEN ORDERING PRODUCTS. VOLTAGE IS NOT SPECIFIED ON THIS WIRE DIAGRAM, BE SURE ALL PRODUCTS ARE VOLTAGE COMPATIBLE. (3) ALL WIRING MUST CONFORM TO NATIONAL, STATE AND LOCAL CODES. (4) ALWAYS CONSULT WITH THE AUTHORITY HAVING JURISDICTION (AHJ) BEFORE INSTALLATION. (5) WHERE REQUIRED BY CODE, CONNECT FAILSAFE SYSTEMS TO THE LOCAL FIRE LIFE SAFETY SYSTEM FOR EMERGENCY RELEASE.

Components

<u>Qty</u>	<u>Description</u>	Part Number	<u>Manufacturer</u>
1	Failsafe Electrified Mortise Lock w/REX	Z7850REX	SDC
1	Power Supply	602RF	SDC
1	Electric Hinge – 10 Conductor	PTH-10	SDC
1	Exterior Digital Keypad	925	SDC

Method of Operation

Access/Egress: Entering a valid digital code releases the lever of the locking device momentarily for access. Entry momentary unlock time is determined by digital keypad programming. Exit will be free at all times. Emergency Release: All locks will release automatically (see note 5) upon activation of the fire life safety system.

© 2004 Security Door Controls Printed in U.S.A

PROJECT NAME:	LOCATION:		DISTRIBUTOR:	
DWG. NO.: 1-RS-Library-0007-R2	SO. NO.:		SECURITY DOOR CONTROLS 3580 Willow Lane	ene
CONTACT:	DATE: 10-2004	DWN BY: MD	Westlake Village CA 91361-4921 Tel. 805-494-0622 FAX: 805-494-8861	SECURITY DOOR CONTROLS

